


TWO FOTO ANIMATOR


These are step-by-step instructions for making your own movie cards. Every step is shown here so it may look a little hard but if you follow each step you'll have your own great animations in a snap!

Point your internet browser to www.leafpdx.com/animator

The arrow points to the menu for the Animator software

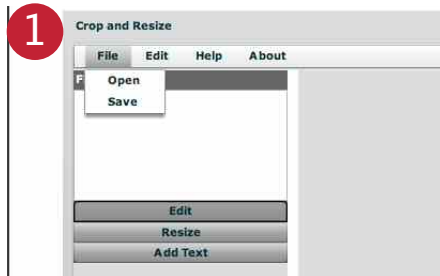


On the menu bar in the gray Animator software: click 'File > Open'

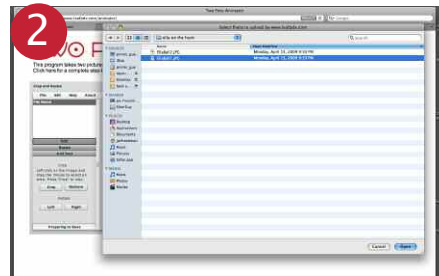


Pick your first photo from the list



After you select your picture it will appear in the window. Pick your second photo the same way

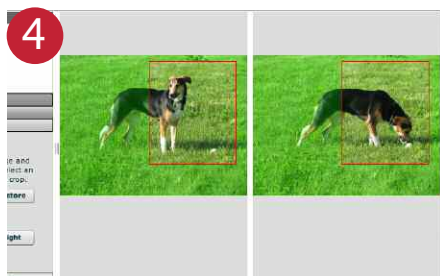

Pick the 'Crop' button and draw a rectangle over either of the pictures

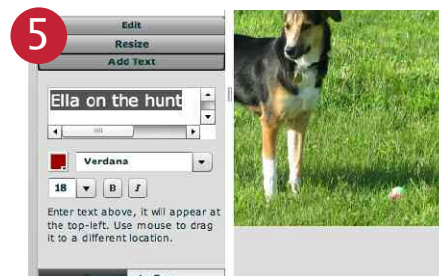


You can 'Add Text' to your cards. Type in the Add Text box. Pick your font and color



Here are both cards cropped and with type. Select 'File > Save'




Once the file is 'Prepared' you'll see this menu box

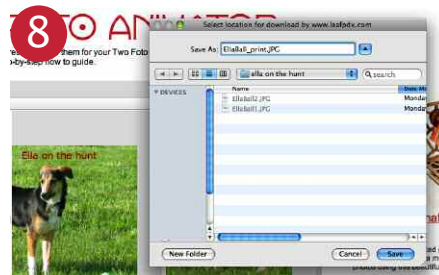

RENAME YOUR IMAGE! Currently it is given the name of the last photo selected



This is the Animator picture ready to print

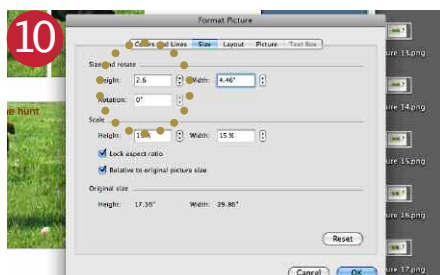

There are lots of ways to print your animator picture depending on your software. The important thing is to set the height to 2.6 inches



Trim your cards with scissors



Insert the cards into both sides of the frame by sliding the bottoms of the cards into the thumb notches at the top